

1.3 Installation

1.3.1 Ribbon Installing

Using original HiTi CS Card Printer Ribbon print kits will optimize your printer's performance and avoid damages to the printer. Use of non HiTi original consumables will void the manufacturer's warranty policy for the printer.

i To optimize printing quality, please engage printer cleaning every time when the ribbon is changed.

- a. Open top cover.
- b. Place ribbon ID key into ID key socket.
- c. Insert ribbon as shown.



Please ensure your ribbon format is corresponded to installed ribbon ID key's label.
Please make sure your ribbon film is facing top side during installation and also ensure the color of ribbon spool/core is matching to the ribbon adapter/holder.

- d. Close top cover slowly and press until a click sound is heard.

